POE-SW8PG-2GF-250



8 Ports PoE Switch


- · One PoE Switch
- · One Power Cord
- · One User Manual

Package Contents: • Two Mounting Kits

User Manual

Power Core Switch Router Internet Converged Switch PoE IP Camera PoE IP Phone PoE Wireless AP

Panel Diagram

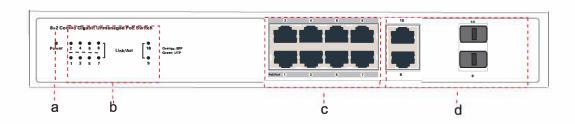

- a. PWR: Power Indicator
- c. PoE port 1~8 Port: 10/100/1000M RJ45 port
- b. Port Link/activity indicator
- d. Uplink Port

LED Definition:

Panel	Color	Status	Indication
Power (Power Indicator)	Green	ON	Power supply normally
		OFF	Power supply abnormally or not powered
Link/activity indicator	Green/Orange	Green ON	Connect network devices normally+10/100/1000Mbps ethernet devices
		Orange ON	SFP Port connected
		Green Blink	Data transmission
		OFF	Abnormal connection or unconnected device

Specifications

Product Name	PoE-SW8PG-2GF-250			
	Downlink ports	1-8: 10/100/1000Mbps RJ45 Ports		
Port Description	Uplink port	9-10 : 2 10/100/1000M RJ45 Port 2 1000M SFP Combo Port		
	Power supply	1,2,4,5(+)/3,6,7,8(-)		
PoE Power Supply	MAX PoE output	30W		
	Total power supply	250W		
LED Indictor	Power(Power Indicator) 、(Link/activity indicator)			
Processing types	Store-and-Forward			
switch mode	IEEE802.3x Flow Control For Full-Duplex Mode And Backpressure For Half-Duplex Mode			
	Backplane Bandwidth	20Gbps		
Performance	Packet Forwarding Rate	14.9Mpps		
	MAC Address Table	8K		
Network Standards	IEEE802.3i 10 BASE-T IEEE802.3u 100 BASE-TX IEEE802.3ab 1000 BASE-T IEEE802.3z 1000 BASE-LX IEEE802.3x Flow Control IEEE802.3af Power over Ethernet IEEE802.3at Power over Ethernet IEEE802.3az EEE			
Power Input	AC 100-240V 50/60Hz			
Dimensions	282mm(L) * 178mm(W) * 44mm(H)	282mm(L) * 178mm(W) * 44mm(H)		
Cables	UTP category 5 or above cable			
Facility and Constitution	Operating Temperature: -10~45°C, Operating Humidity: 10%~90%RH non-condensing			
Environment Specification	Storage Temperature : -20~75°C , Storage Humidity : 5%~95%RH non-condensing			

Installation Notes

TO install the switch, please follow the steps:

- (1) This PoE switch is only used indoor, please place it in ventilated and dry space.
- (2) Please avoid placing the Switch on an unsteady desk.
- (3) Please insert the power adapter carefully to the power socket of the switch, and then connect it properly to a power source through the cable of the switch.
- (4) Ensure adequate ventilation space(≥10cm) around the switch for dissipating heat and air.
- (5) Please avoid any heavy thing placed on the switch.
- (6) Please use the attached power adapter.

Connecting the Unit

- (1) Please respectively connect two ends of the cable to the switch port and computer or other network devices.
- (2) Please separately link the ends of the included power supply configuration to power jack and socket.
- (3) The Power indicator will light all the time.

Warranty Card

Model NO.	
Serial NO.	
Date of Purchase	
RMA Number	
Retum Reason	
Customer Name	
Customer Address	
Email	

Note: Please refer to the User Manual for Detail Warranty policy.